

MAINTENANCE CHART

Your Rover Distributor or Dealer will carry out the first and second free service inspection at 750 miles (1,000km) and 1,500 miles (2,500 km.) respectively.

Key No.1 PAGE No. 39 Check tyre pressure and inspect tyre treads every month.
Key No.22 Page No. 40 Check engine oil level every 250 miles (500 km.).

ITEM	KEY No.	PAGE No.	DETAILS	EVERY 3,000 MILES, (5,000 km) OR 120 HOURS	EVERY 6,000 MILES, (10,000 KM) OR 240 HOURS	EVERY 9,000 MILES, (15,000 KM) OR 360 HOURS	EVERY 12,000 MILES, (20,000 KM) OR 480 HOURS	EVERY 15,000 MILES, (25,000 KM) OR 600 HOURS	EVERY 18,000 MILES, (30,000 KM) OR 720 HOURS	EVERY 21,000 MILES, (35,000 KM) OR 840 HOURS	EVERY 24,000 MILES, (40,000 KM) OR 960 HOURS	OCCASIONAL ATTENTION	EVERY SIX MONTHS	
				3,000	6,000	9,000	12,000	15,000	18,000	21,000	24,000			
TYRES AND WHEELS	17	40	Change round all wheels	▲	▲	▲	▲	▲	▲	▲	▲			
ENGINE	4	41	Drain and refill	▲	▲	▲	▲	▲	▲	▲	▲			
	5	42	Clean breather filters		▲		▲		▲		▲			
	8	42	Renew external oil filter element		▲		▲		▲		▲			
	10	43	Check or replace sparking plugs		▲		▲		▲		▲			
	12	43	Adjust tappets									▲		
GEARBOX AND TRANSFER BOX	-	44	Remove flywheel housing drain plug (when fitted for wading)	▲	▲	▲	▲	▲	▲	▲	▲			
	13	45	Check oil level	▲	▲	▲	▲	▲	▲	▲	▲			
	13	45	Drain and refill			▲			▲					
FRONT AND REAR AXLES	16	46	Check differential oil level	▲	▲	▲	▲	▲	▲	▲	▲			
	16	47	Drain and refill differential		▲		▲		▲		▲			
	20	47	Check oil level in front swivel pin housing	▲	▲	▲	▲	▲	▲	▲	▲			
	20	48	Drain and refill oil in front swivel pin housing		▲		▲		▲		▲			
STEERING BOX AND BALL JOINTS	20	48	Check oil level	▲	▲	▲	▲	▲	▲	▲	▲			
	19	48	Check rubber boots on steering joints	▲	▲	▲	▲	▲	▲	▲	▲			
PROPELLER SHAFTS, FRONT AND REAR	14	49	Lubricate joints and journals	▲	▲	▲	▲	▲	▲	▲	▲			
	15	49	Check securing bolts				▲				▲			
DISTRIBUTOR PETROL MODELS	25	50	Lubricate	▲	▲	▲	▲	▲	▲	▲	▲			
	25	50	Check contact points		▲		▲		▲		▲			
AIR CLEANER	3	52	Empty, clean and refill	▲	▲	▲	▲	▲	▲	▲	▲			
FUEL SYSTEM PETROL MODELS	9	53	Clean sediment bowl				▲				▲			
	24	53	Clean carburetter filter				▲				▲			
FUEL SYSTEM DIESEL MODELS Home models with one filter on dash	56	56	Change fuel filter element				▲				▲	Prime fuel system after these operations		
	57	57	Clean sediment bowl				▲				▲			
FUEL SYSTEM DIESEL MODELS Export models with two filters on dash	56	56	Change 1st fuel filter element, that is filter fed from fuel pump				▲				▲	Prime fuel system after these operations		
	56	56	Change 2nd fuel filter element, that is filter which feeds to Distributor pump	EVERY 36,000 (60,000 KM)										
	57	57	Clean sediment bowl				▲				▲			
DIESEL MODELS INJECTORS	59	59	Check and adjust				▲				▲			
BATTERY	2	61	Check acid level	▲	▲	▲	▲	▲	▲	▲	▲			
DYNAMO	23	61	Lubricate				▲				▲			
BODY	62	62	Check tightness of body securing bolts									▲		
COOLING SYSTEM	18	30	Check water level									▲		
	21	62	Check and adjust fan belt if necessary		▲		▲		▲		▲			
BRAKES AND CLUTCH	7	63	Check fluid level in reservoir	▲	▲	▲	▲	▲	▲	▲	▲			
		63	Adjust brake shoes									▲		
			Renew all rubber seals	EVERY 39,000 MILES (65,000 KM) OR THREE YEARS										
	11	66	Adjust clutch free pedal movement									▲		
GENERAL			Apply a few spots of oil to all exposed joints on the throttle linkage, door locks and hinges, bonnet prop rod, etc. Inspect wiring and pipes for signs of chaffing which might cause a short circuit or leaks.									▲		
ROAD SPRINGS	26	67	Check tightness of "U" bolts and spring clips									▲		
HEADLAMPS	19	19	Check beam setting										▲	
LAMPS			Check for correct operation		▲		▲		▲		▲			

ITEM	KEY No.	PAGE No.	DETAILS	EVERY 3,000 MILES, (5,000 km) OR 120 HOURS	EVERY 6,000 MILES, (10,000 KM) OR 240 HOURS	EVERY 9,000 MILES, (15,000 KM) OR 360 HOURS	EVERY 12,000 MILES, (20,000 KM) OR 480 HOURS	EVERY 15,000 MILES, (25,000 KM) OR 600 HOURS	EVERY 18,000 MILES, (30,000 KM) OR 720 HOURS	EVERY 21,000 MILES, (35,000 KM) OR 840 HOURS	EVERY 24,000 MILES, (40,000 KM) OR 960 HOURS	OCCASIONAL ATTENTION	EVERY SIX MONTHS
ADDITIONAL CHECKS				3,000	6,000	9,000	12,000	15,000	18,000	21,000	24,000		
OVERDRIVE			Drain and refill with EP90 oil		▲		▲		▲		▲		
COOLING SYSTEM			Drain, flush and refill with recommended concentration of anti-freeze.	EVERY 24,000 MILES (40,000 KM) OR TWO YEARS									
FUEL SYSTEM ALL MODELS			Drain, and flush fuel tank. Clean mesh strainer on fuel pick-up pipe.	EVERY 39,000 MILES (65,000 KM) OR THREE YEARS									
FRONT AND REAR AXLES			Check and clean axle breather valves, especially after heavy off-road duty.		▲		▲		▲		▲		
			Check wheel bearing adjustment										▲
BRAKES			Remove drums and inspect linings on all brakes including hand brake. Replace hydraulic fluid.	EVERY 39,000 MILES (65,000 KM) OR THREE YEARS									
IGNITION TIMING			Check static timing.									▲	
WINDSCREEN WIPERS/WASHERS			Check correct operation & replace blades as required. Check fluid level.										▲

WEEKLY CHECKS OR BEFORE ATTEMPTING A LONG JOURNEY

ENGINE	Check level of engine oil
TRANSMISSION	Check oil levels
COOLING SYSTEM	Check level and condition of hoses Check fan belt
WHEELS & TYRES	Check & adjust tyre pressures Check wheels are secure
BRAKES	Check operation and fluid leaks/level
LIGHTING	Check for correct operation of all lights
BATTERY	Check charging system & acid level
WINDSCREEN WASHERS	Check fluid level